


ABRASIVE RECOVERY SYSTEM

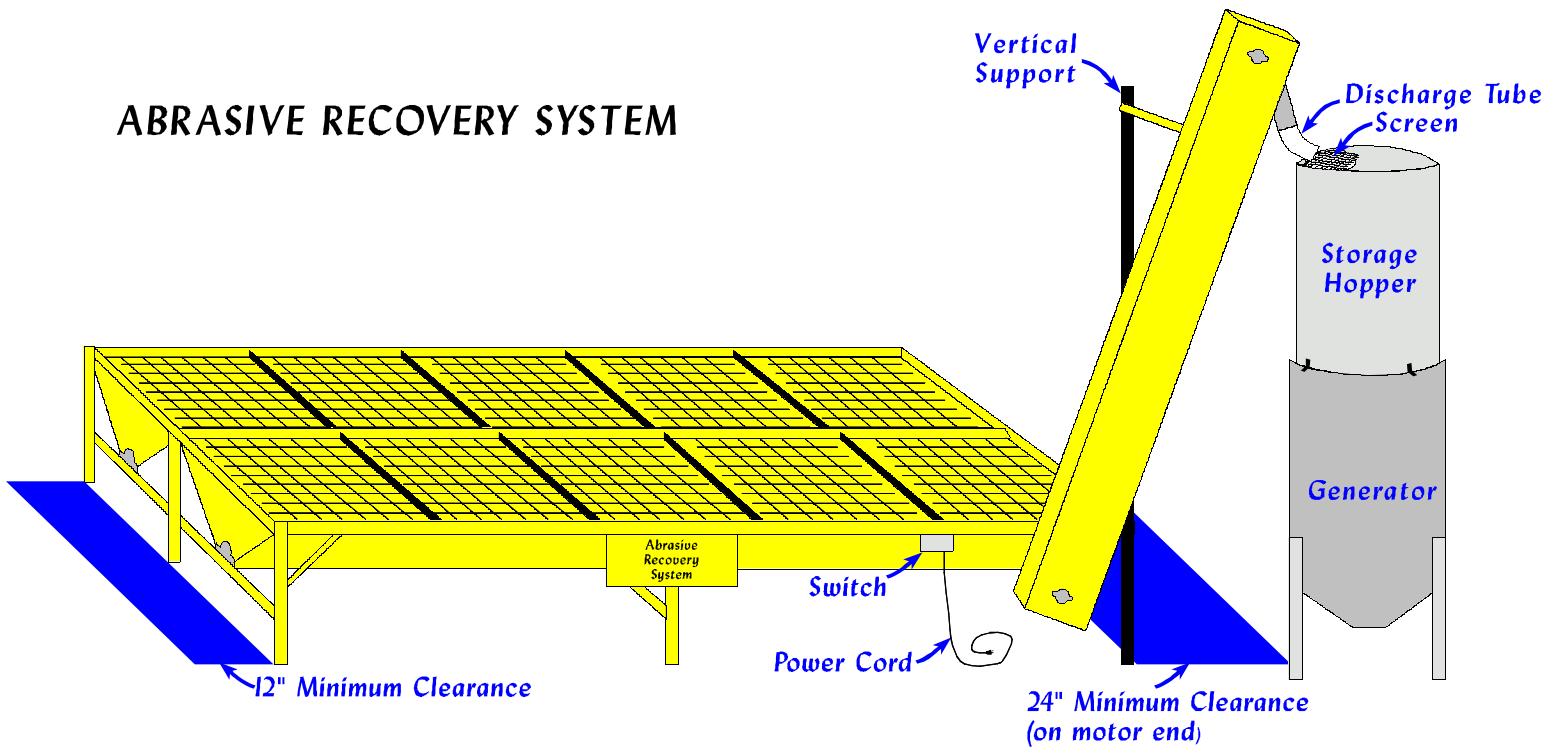

1. Scoot Recovery System to final location. Provide minimum clearance as shown above for maintenance.
2. Check each leg for contact with floor. If not in contact, extend threaded leveling bolt at bottom of each leg to ensure Recovery System is fully supported.
3. Rotate vertical support and secure with 3/8" bolts, nuts, lockwashers.
4. Rotate elevator up into tilted position. Attach brace to vertical support at predrilled hole. Use 3/8" bolt, nut, lockwasher.
5. Move generator as close as possible to elevator discharge. Place storage hopper on top of generator.
6. Extend discharge tubing to hopper. Maintain at least 45 degree drop thru tube.
7. Place coarse screen at tube discharge.
8. Install guard over drive chain and sprockets.

Refer to operating and maintenance instructions for initial startup.